

DC SMARTstart


72-1021-070
Ship Kit



Installation Kit Instructions

The DC SmartStart is shipped with the 72-1021-070 installation kit. Included in the kit are:

- (12) 4-40 Captive Panel Screws
- (12) MMP Captive Screw Nuts
- (12) Red Housings
- (12) Blue Housings
- (24) 45 Amp Contacts (Load should not exceed 25A, due to mating contact inside the PDU.)
- (12) Output Connector Set Spacers (Red)
- (4) 2-Hole Ring Terminals

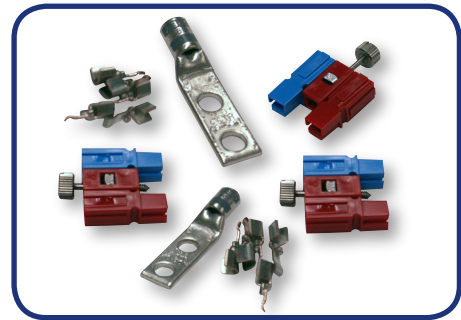

WARNING

YŒÛPQPŌÄÄT æçä { ~ { Ätæcä } *Ä [-Äc@^Ä • [|äÄ • cæc^Ä à! ^æ \ ^tÄ~ [|Ä •] ^&ä, &Ä&@æ } ^|Ä • @ [~ |äÄ } [cÄ à ^Ä ^ø & ^Ä ä ä È

Assembly Instructions

1. Strip wire to 5/16 inches (7.9 mm).

WARNING

WARNING! Avoid cutting or nicking the wire strands. Also, do not twist or bend strands too sharply.

2. Insert wire to the base of contact, then crimp. The indentation should be located in the middle of the barrel.
3. Insert contact and wire into the housing from the rear. Contact must be placed under the barrier and snap over the end of the retaining spring.
4. Pull slightly to make sure the contact is locked in place.
5. Connect housings to DC SmartStart. Once housings are pushed in, twist the screw to lock it in place.

Contact Removal

1. Turn power off.
2. Apply pressure to spring at front of housing and pull wire out from rear of housing.